

Quick Installation Guide

INTRODUCTION

Model	Power Source	Description
XT10-041-250	100~240VAC 56VDC	EPoT RX Switch, 4x EPoT RJ45, 1x GbE RJ45, 100-240VAC Input or 56VDC, 0°C~50°C


PACKAGE CONTENTS

* 1x EPoT RX Switch	* 1x Quick Installation Guide
* 2x rack mount ears	* 1x power cord (type by the shipped-to area)

⚠ IMPORTANT:

1. Install the EPoT RX switch in a ventilated and dry place that is free of electromagnetic source, vibration, moisture, and dust.
2. Make sure the ventilation openings on the switch are not blocked.
3. Use CAT5e or CAT6 UTP/STP cables.
4. Please avoid using low quality cables, which will seriously limit the cabling distance and power delivery.
5. AC input (100/240V/AC, 50/60Hz,3-1.5A);DC input (56VDC,4.5A)

CONNECTION

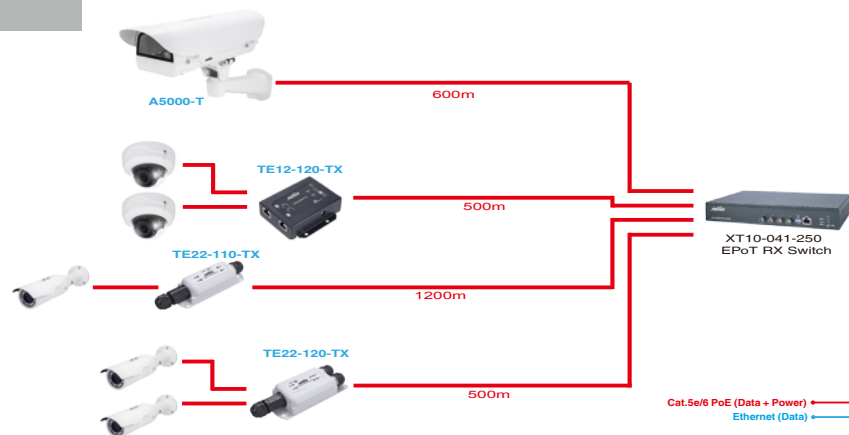

Distance/Power Chart

Length of Coaxial Cable	Power
300m	<34.72W
500m	<25.2W
800m	<13.11W
1000m	<10W
1200m	<9.66W
1200m ~ 2400m	Data only (100Mbps)

NOTE:

1. The numbers comply using Cat.6 cables.
2. The length of network cable for camera connection is 1m CAT6 cable.
3. The power delivery will vary on the quality of UTP/STP cable due to resistance.

Rack-mounting



LEDs

LAN	Green ON	Ethernet port is connected.
	Green flash	Data is being transmitted or received
	OFF	No connection
PWR	Yellow ON	RX Switch power status
LINK	Green ON	Rx Switch and EPoT TX device connect status
POT	Yellow ON	Power over UTP/STP cable status

PoT DIP Switch

DIP#	On	Delivery power output to EPoT TX device
	Off	No power output to EPoT TX device

Join Button

- Press the Join button for 1-3 seconds on both Local and Remote Extenders to Link them.
- Press the Join button on the Remote Extender for 5-8 seconds to disconnect the Link between the Extenders
- Press the Join button for 10~15 seconds to reset the Extender to default.

All specifications are subject to change without notice.
Copyright © 2020 AETEK INC. All rights reserved.