

# ALTV248 Series CCTV Power Supplies

# Installation Guide

# Models Include:

# ALTV248

- 24VAC @ 4 amp (100VA) or 28VAC @ 3.5 amp.
- Eight (8) Fuse Protected Outputs.

# ALTV248175

- 24VAC @ 7.25 amp (175VA) or 28VAC @ 6.25 amp (175VA).
- Eight (8) Fuse Protected Outputs.

# ALTV248300

- 24VAC @ 14 amp (350VA) or 28VAC @ 12.5 amp (350VA).
- Eight (8) Fuse Protected Outputs.

# ALTV248300M

- 24VAC @ 12.5 amp (300VA) or 28VAC @ 10 amp (300VA).
- Eight (8) Fuse Protected Outputs.

# ALTV248600

- 24VAC @ 28 amp (700VA) or 28VAC @ 25 amp (700VA).
- Eight (8) Fuse Protected Outputs.

# ALTV248CB

- 24VAC @ 4 amp (100VA) or 28VAC @ 3.5 amp.
- Eight (8) PTC Protected Outputs.

## ALTV248175CB

- 24VAC @ 7.25 amp (175VA)
   or 28VAC @ 6.25 amp (175VA).
- Eight (8) PTC Protected Outputs.

# *ALTV248300CB*

- 24VAC @ 14 amp (350VA) or 28VAC @ 12.5 amp (350VA).
- Eight (8) PTC Protected Outputs.

# **ALTV248300CBM**

- 24VAC @ 12.5 amp (300VA) or 28VAC @ 10 amp (300VA).
- Eight (8) PTC Protected Outputs.

# **ALTV248600CB**

- 24VAC @ 28 amp (700VA) or 28VAC @ 25 amp (700VA).
- Eight (8) PTC Protected Outputs.



#### Overview:

These Altronix CCTV Power Supplies provide provide 24VAC/28VAC distributed via eight (8) fuse or PTC protected outputs for powering CCTV Cameras, heaters and other video accessories.

#### **Eight (8) Output ALTV248 Reference Chart:**

Altronix Model Number	Output Voltage	Total Output Current (Power)	Number of Outputs	PTC Protected Outputs	Fuse Protected Outputs	Output Current (max per output)	Main Fuse Ratings on Board	Main Fuse Ratings on Board
ALTV248	24VAC 28VAC	4 amp 3.5 amp	8	-	х	3.5 amp	5 amp/250V	0.9 amp
ALTV248CB	24VAC 28VAC	4 amp 3.5 amp	8	-	-	2.5 amp	5 amp/250V	0.9 amp
ALTV248175	24VAC 28VAC	7.25 amp 6.25 amp	8	-	Х	3.5 amp	10 amp/250V	1.45 amp
ALTV248175CB	24VAC 28VAC	7.25 amp 6.25 amp	8	Х	-	2.5 amp	10 amp/250V	1.45 amp
ALTV248300	24VAC 28VAC	14 amp	8	-	х	3.5 amp	15 amp/32V	2.7 amp
ALTV248300CB	24VAC 28VAC	14 amp 12.5 amp	8	Х	-	2.5 amp	15 amp/32V	2.7 amp
ALTV248300M	24VAC 28VAC	12.5 amp	8	-	Х	3.5 amp	15 amp/32V	2.7 amp
ALTV248300CBM	24VAC 28VAC	12.5 amp	8	Х	-	2.5 amp	15 amp/32V	2.7 amp
ALTV248600	24VAC 28VAC	28 amp 25 amp	8	-	X	3.5 amp	(2) 15 amp/32V	5.4 amp
ALTV248600CB	24VAC 28VAC	28 amp 25 amp	8	х	-	2.5 amp	(2) 15 amp/32V	5.4 amp

#### Specifications:

#### Input:

• 115VAC, 50/60Hz.

#### Output:

- Eight (8) fuse or PTC protected outputs.
- 24VAC @ 4 amp (100VA) supply current (0.5 amp per device, 3.5 amp max.) or 28VAC @ 3.5 amp (100VA) supply current (0.438 amp per device, 3.5 amp max.).
- Outputs are rated @ 3.5 amp (fused) or 2.5 amp (PTC).
- Surge suppression.

#### Features:

- Secondary fuse rated @ 5 amp/250V.
- AC power LED.
- Power ON/OFF switch.
- Spare fuses provided. (all models w/primary and/or secondary fuses).

#### **Enclosure Dimensions:**

- *ALTV248*, *ALTV248CB*, *ALTV248175* and *ALTV248175CB*:
  - 8.5" x 7.5" x 3.5" (215.9mm x 190.5mm x 88.9mm).
- *ALTV248300M* and *ALTV248300CBM*: 8.5" x 7.5" x 3.75" (215.9mm x 191mm x 95mm).
- *ALTV248300* and *ALTV248300CB*: 12.25" x 7.25" x 4.5" (311.15mm x 184.15mm x 114.3mm).
- ALTV248600 and ALTV248600CB:
   13.5" x 13" x 3.25" (342.9mm x 330.2mm x 82.55mm).

- 2 - ALTV248series

#### Installation Instructions:

- 1. Mount unit in the desired location. Mark and predrill holes in the wall to line up with the top two keyholes in the enclosure. Install two upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the two upper screws, level and secure. Mark the position of the lower two holes. Remove the enclosure. Drill the lower holes and install three fasteners. Place the enclosure's upper keyholes over the two upper screws. Install the two lower screws and make sure to tighten all screws (*Enclosure Dimensions*, pg. 7,8). Secure enclosure to earth ground.
- 2. Slide switch on PD board to the OFF position for models ALTV248 and ALTV248CB (*Figs. 1 & 2, pg. 4*). Turn OFF main switch on all other models, (*Figs. 3-5, pgs. 5-6*).
- 3. All units are factory set for 24VAC operation.

  For 28VAC operation adjust unit prior to mounting and applying power as follows:

  Change the wire position so that the black wire [28V] is connected to the terminal marked [P] and the yellow wire [24V] is connected to the terminal marked [S].
- 4. Connect AC power to the black and white flying lead of the transformer(s) (Figs. 1-5, pgs. 4-6). Use 18 AWG or larger for all power connections.
- 5. Measure output voltage before connecting devices. This helps avoiding potential damage. Terminals marked [1P 8P] are positive of the same polarity.
  - CAUTION: Determine the maximum operating voltage of the equipment being powered before adjusting the output voltage.
- 6. Connect devices to the terminals marked [1P 1N] through [4P 4N] on PD4/PD4CB board (Figs. 2 & 5, pgs. 4 & 6) or terminals marked [1P 1N] through [8P 8N] on PD8/PD8CB board (Figs. 1 & 3, pgs. 4-5), carefully observing polarity.
- 7. Slide switch on PD board to the ON position for models ALTV248 and ALTV248CB (*Figs. 1 & 2, pg. 4*). Turn main switch on all other models to the "RESET" (ON) position (*Figs. 3-5, pgs. 5-6*).
- 8. Green LED will illuminate when unit is powered.
- 9. Upon completion of wiring, secure enclosure door with screws (supplied).

Caution: Equipment to be installed/serviced by authorized/trained personnel only. Shut branch circuit power before installing/servicing equipment.

WARNING: To reduce the risk of fire or electric shock, do not expose the unit to rain or moisture. This installation should be made by qualified service personnel and should conform to the National Electrical Code and all local codes.

#### **Terminal Identification:**

#### PD4/PD4CB - Power Distribution Module

1P - 4P	AC output.
1N - 4N	AC output.

#### PD8/PD8CB - Power Distribution Module

1P - 8P	AC output.
1N - 8N	AC output.



The lightning flash with arrow head symbol within an equilateral triangle is intended to alert the user to the presence of an insulated DANGEROUS VOLTAGE within the product's enclosure that may be of sufficient magnitude to constitute an electric shock.




The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



**CAUTION:** To reduce the risk of electric shock do not open enclosure. There are no user serviceable parts inside. Refer servicing to qualified service personnel.

ALTV248series - 3 -

Fig. 1 - ALTV248 • ALTV248CB

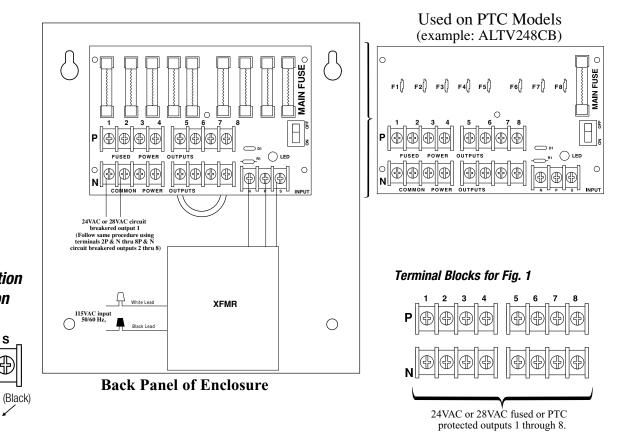

28VAC P S (Yellow)


**Voltage Selection** 

Configuration

(Yellow)


24VAC Output


Fig. 2 - ALTV248175 • ALTV248175CB

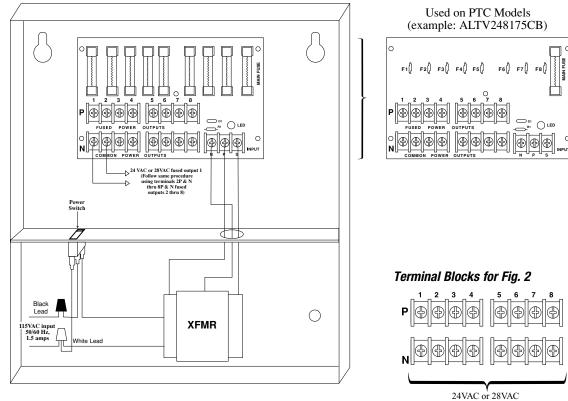


fused or PTC protected outputs 1 through 8.

Fig. 3 ALTV248300 • ALTV248300CB

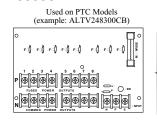

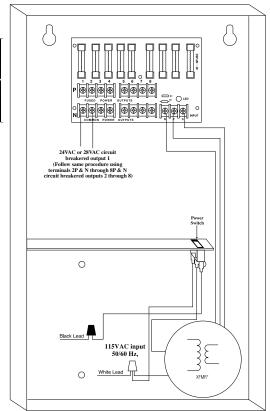

# Voltage Selection Configuration

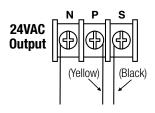

# Terminal Blocks for Fig. 3


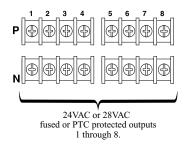


Fig. 4 - ALTV248300M • ALTV248300CBM


#### CBM

# Terminal Blocks for Fig. 4

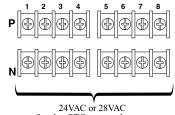

24VAC or 28VAC fused or PTC protected outputs 1 through 8.

# Used on PTC Models (example: ALTV248300CBM)

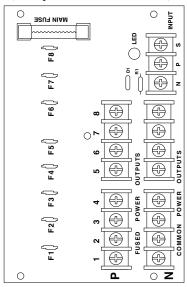



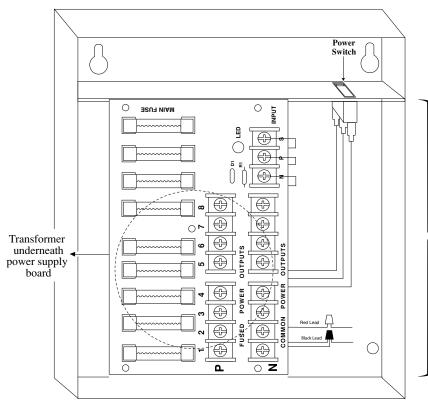



Fig. 5 - ALTV248600 • ALTV248600CB

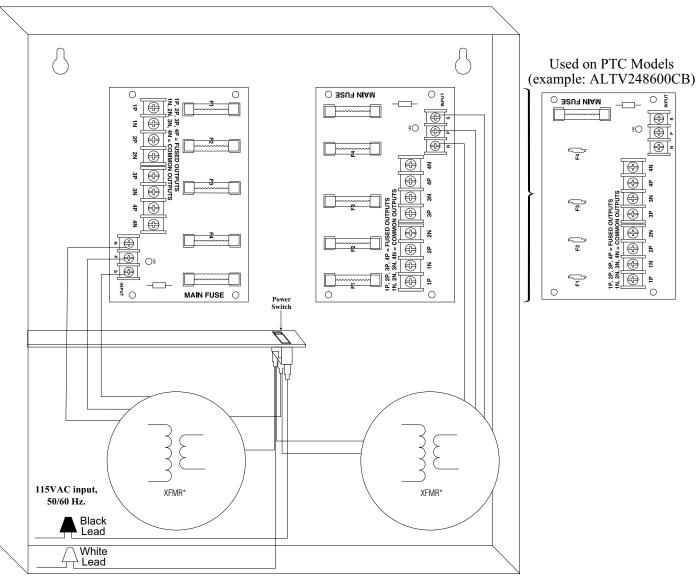

# Voltage Selection Configuration

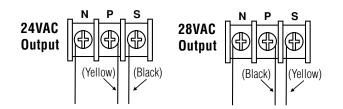

#### Terminal Blocks for Fig. 5

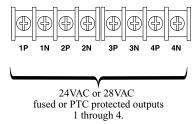


- 6 - ALTV248series

## Enclosure Dimensions (H x W x D) for:

- ALTV248
- ALTV248175
- ALTV248CB
- ALTV248175CB


8.5" x 7.5" x 3.5" (215.9mm x 190.5mm x 88.9mm).

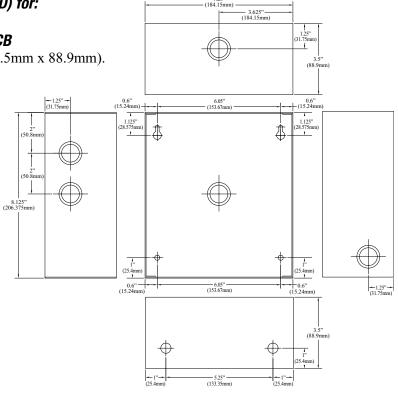

# Enclosure Dimensions (H x W x D) for:

- ALTV248300M
- ALTV248300CBM


8.5" x 7.5" x 3.75" (215.9mm x 191mm x 95mm)

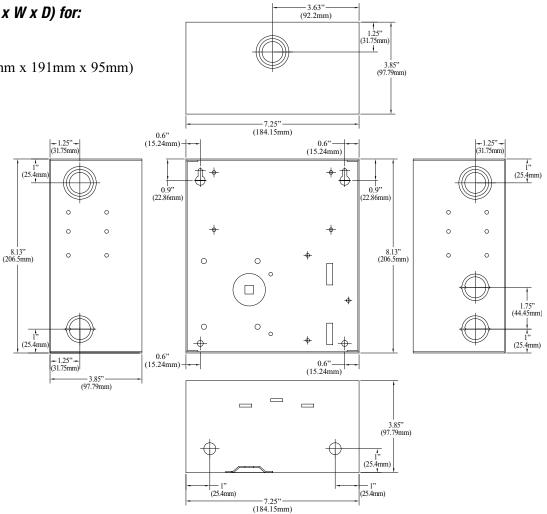

# Enclosure Dimensions (H x W x D) for:

- ALTV248300
- ALTV248300CB

12.25" x 7.25" x 4.5" (311.15mm x 184.15mm x 114.3mm)

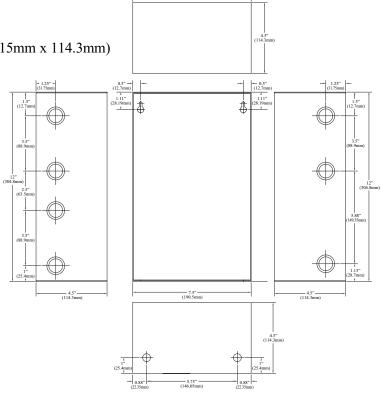

## Enclosure Dimensions (H x W x D) for:

- ALTV248600
- ALTV248600CB

13.5" x 13" x 3.25" (342.9mm x 330.2mm x 82.55mm)

